


CONTENTS

QUICK REFERENCE GUIDE

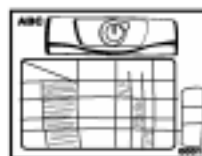

PROGRAMME CHART

PREPARING THE LAUNDRY

SELECTING A PROGRAMME AND OPTIONS


STARTING AND COMPLETING A PROGRAMME

CHANGING A PROGRAMME

INTERRUPTING A PROGRAMME

DAILY MAINTENANCE AND CLEANING

INSTRUCTIONS FOR USE

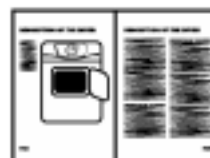

BOOKLET

BEFORE USING THE DRYER / CONNECTIONS

PAGE 36

ELECTRICAL CONNECTION

PAGE 37

PRECAUTIONS AND GENERAL RECOMMENDATIONS

PAGE 38

DESCRIPTION OF THE DRYER

PAGE 39

DRAINAGE SYSTEM

PAGE 40

DOOR REVERSIBILITY / CHILD SAFETY LOCK

PAGE 41

HEAT EXCHANGER

PAGE 42

TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE

PAGE 43

BEFORE USING THE DRYER / CONNECTIONS

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- Remove the protective foil from the control panel.

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cable replacement is only to be carried out by After-Sales Service.
- After installation access to the mains plug has to be guaranteed, or the all-pole disconnection has to be possible with a switch.

3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures around freezing or above 35° C.
- Before running the first cycle ensure the water container and heat exchanger are correctly positioned.
- Only for water container top version: if possible use the hose supplied to drain the water directly into the domestic plumbing system. This will avoid having to empty the water container at the end of each drying cycle since the condensation water can be directly drained away.
- Take care not to install the dryer on a deep-pile carpet.
- Take care not to trap the mains cable between the dryer and the wall.

Stability:

When installing the dryer always carefully level the dryer adjusting the four feet and check the correct levelling with a spirit level.

To built in the dryer

Remove the work-top and replace it with the Built-In kit UBS 10 (according to Eec Electrical Regulations), available at your dealer.

Stacking kit

Your dryer can be stacked on top of your front loading washing machine. To do this, use stacking kit AMH 542, available at your dealer.

Minimum housing dimensions:

Width: 600 mm
Height: 850 mm
Depth: 600 mm



ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

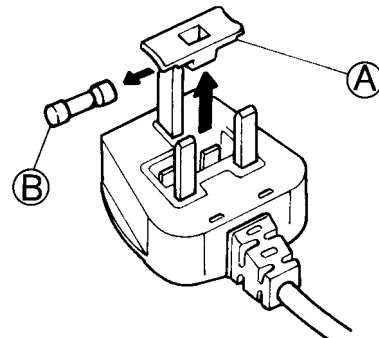

2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.


3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packing



The packing box may be fully recycled as confirmed by the recycling symbol .

2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
- By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy. You will save time and energy when running your drying cycle.
- Do not overdry the laundry.
- Clean the lint filter after **every** drying cycle.
- Place your dryer in a room with a temperature between 15° C and 20° C. In case of higher temperature ventilate the room.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the *gentle* option only with small loads.
- When drying cotton, for example, dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.

3. Disposing of packaging and old Dryer.

The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.

- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.
- ### 4. Child safety:
- Children must not be allowed to play with the dryer.
- ### 5. General recommendations:
- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
 - Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
 - To clean the outside of the dryer, use a neutral detergent and a damp cloth.
 - Do not use abrasive detergents.
 - Wipe away lint from the door seal and the door using a damp cloth.
 - If the lint filter mesh is clogged, clean it with water and a soft brush.

- Since lint can go through the filter it is necessary to clean, from time to time, the complete filter area (including below the filter) with a brush, a damp cloth or with a vacuum cleaner.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

EC Declaration of Conformity


- This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
 - 73/23/EEC Low Voltage Directive
 - 89/336/EEC EMC Directive
 - 93/68/EEC CE Marking Directive.



- The dryer must only be used in the household for the prescribed uses.

DESCRIPTION OF THE DRYER

- A. Work top.
- B1. Water Container bottom version or
- B2. Water Container top version.
- C. Contact pin.
- D. Door:
- To open the door: pull the handle.
- To close the door: push gently until closed.
- E. Filter.
- F. Child Safety Lock.
- G. Button for heat exchanger flap opening.
- H. Heat exchanger.

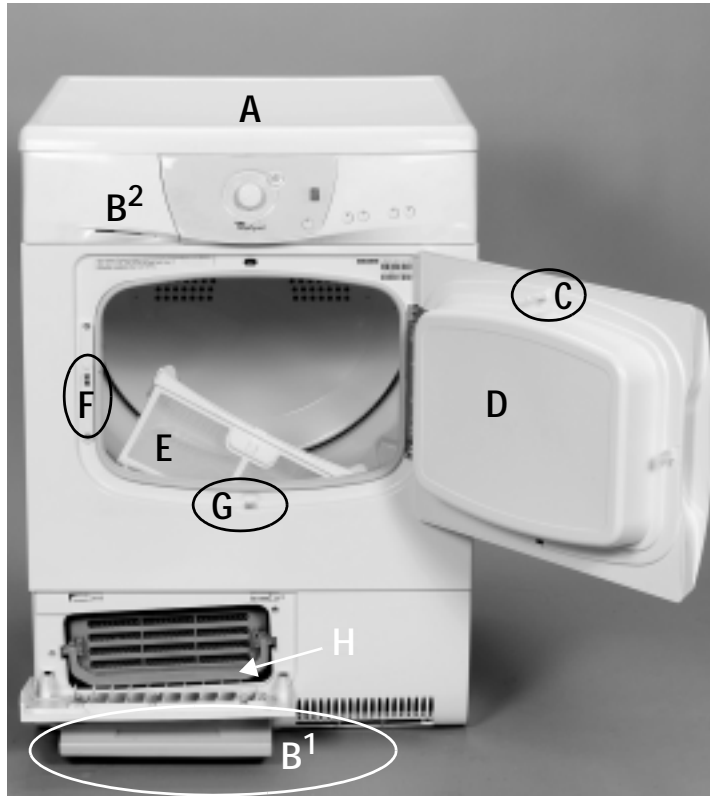

Reminder - Maintenance and Cleaning

Clean the lint filter at the end of every drying cycle.

- Open the door
- Pull the filter upwards
- Open the filter
- Remove lint using a soft brush or your fingertips
- Close the filter
- Push the filter back into place.

Heat exchanger

Clean the heat exchanger at least every 3 months (See "CONDENSER" chapter).

- Wipe away any lint/fluff from the door seal and interior using a damp cloth.

DRAINAGE SYSTEM

For water container top only



To avoid having to empty the water container at the end of each cycle, the condensation water can be drained away.

Note: if the drain hose is not supplied, the optional accessory AMH 883 kit, available at your dealer, should be used.

The connection for direct draining is at the rear of the dryer.

- A. Place an absorbent cloth underneath to collect water spillage.
- B. Remove the hose located at the lower rear part of the dryer and insert it in the nearby hole.
- C. Fix the hose (length: 1.5 m) to the outlet connection. The height difference between the two drainage connections should not exceed 1m.




Notice: To avoid siphoning, the end of the hose must not be immersed in the drain water. Avoid bending and twisting the hose.

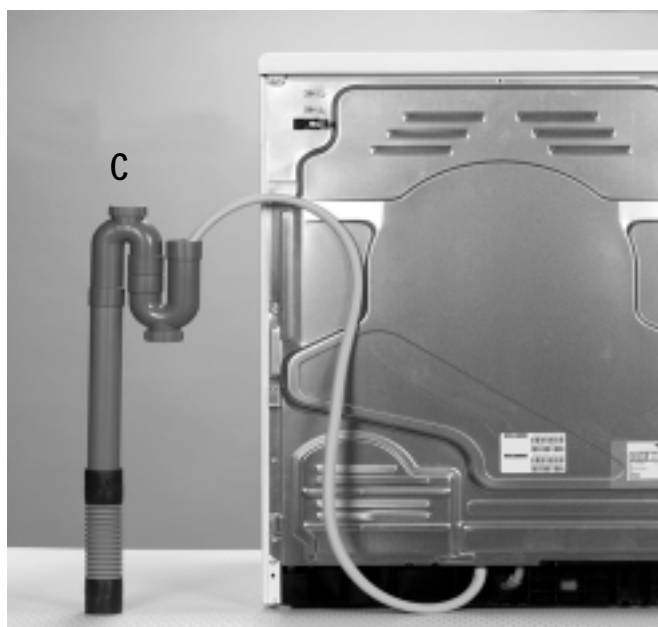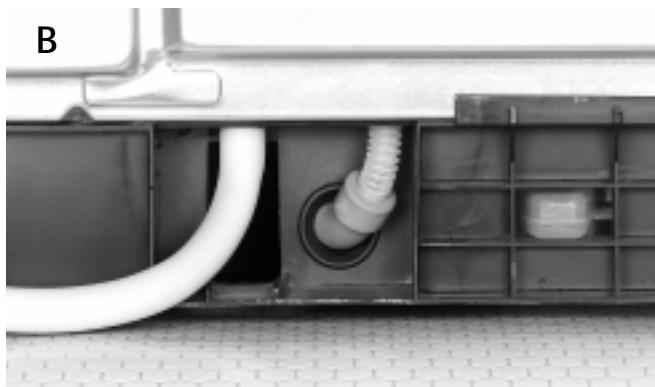

DOOR REVERSIBILITY / CHILD SAFETY LOCK

Door Reversibility

- A. Unplug the dryer.
- B. Open the door.
- C. Using a spanner, turn the contact pin in the upper part of the door by 90° and remove it.
- D. Unscrew the 2 screws of the door hinge and remove the door.
- E. Removing the door lock:
Unscrew the 2 screws above and below the door lock system.
Lift the door lock from the bottom, sliding it upwards about 1.5 cm, and remove it.
- F. Reverse the door:
Fasten the door on the desired side with the 2 screws.
- G. Insert the door lock system on the opposite side of the hinge fixation and push it down 1.5 cm.
- H. Fix the 2 screws above and below the door lock system.
- I. Take care not to reverse the sense of the door lock system. The child safety must be above the locking mechanism.
- J. Replace the contact pin in the inside of the door (top).

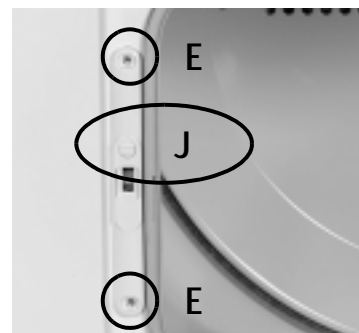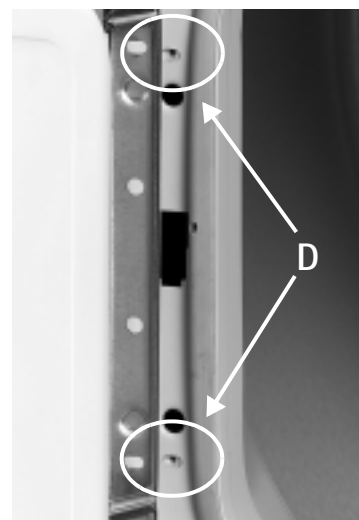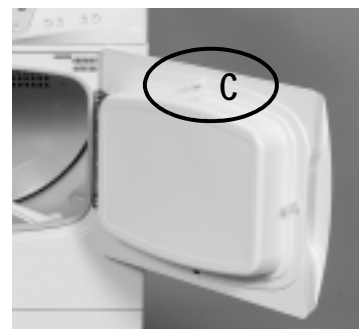

Child Safety Lock

How to use the child safety lock

1. Open the door.
2. Using a coin or a screwdriver, turn the plastic screw (J) clockwise 90°.
Slot vertical: the door cannot be locked.
Slot horizontal: the door can be locked.



HEAT EXCHANGER

Before cleaning or carrying out maintenance, switch off the dryer.

Clean the heat exchanger at least every three months, proceeding as follows:

- A. Open the door and press the heat exchanger flap button on the bottom of the door entrance.
- B. The heat exchanger flap opens.
- C. Fold the heat exchanger handle upwards to the horizontal position and remove the heat exchanger.
- D. Clean the heat exchanger under running water by turning it around to reach all sides.
- E. Wipe away dust and lint from the seals and the heat exchanger.
- F. Remove the lint in the heat exchanger housing. Keep the drainage hole (left side in front in the housing) free from lint.
- G. Replace the condenser in its housing (TOP or HAUT mark upwards) and press the handle.
- H. Close the flap.

The heat exchanger aluminium plates may become discoloured over time.

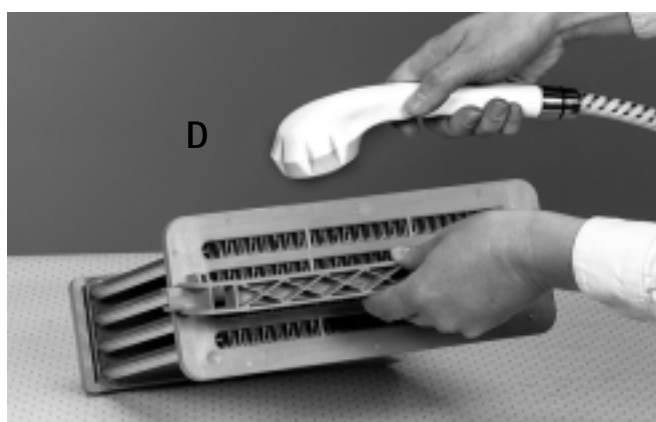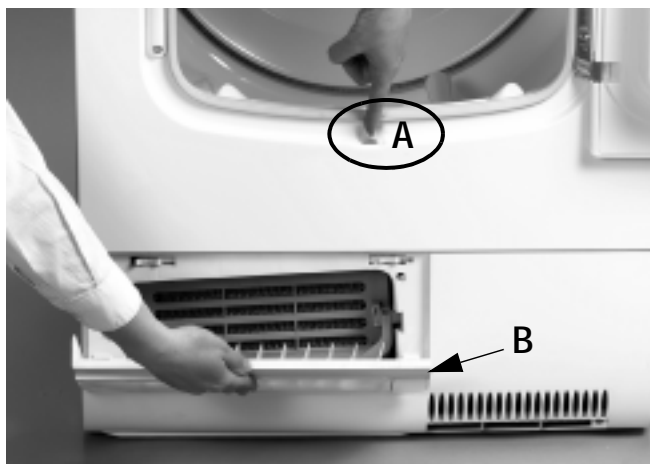

TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE

Troubleshooting Guide

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm? When the spinning speed is less than 800 rpm the water container fault may occur during the drying cycle)?
- Is the lint filter dirty (filter indicator lamp on)?
- Is the heat exchanger dirty? (refer to the Instructions for use)
- Is the ambient temperature too high?

The dryer does not operate:

(after a power failure and/or interruption to the mains supply, always press the Start/Pause button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has the programme been selected?
- Has the start delay option been selected?
- Has the **Start/Pause** button been pressed?

Lint filter or water container indicator lamp light on:

- Is the lint filter clean?
- Is the water container empty?
- Is the water container correctly positioned?
- Is the heat exchanger clean?

Water droplets underneath the dryer:

- Is the heat exchanger correctly positioned?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been positioned correctly?

After-Sales Service

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

SERVICE 0000 000 00000



GB AWZ 8992

QUICK REFERENCE GUIDE

Please also carefully read the "Instructions for Use".



	Very Wet Load	Wet Load	Load	Drying options		Gentle & Rapid cannot be selected together		Buzzer & Anti-Crease cannot be selected together		
	Indicative drying times (in minutes)		kg	Fabric programmes & Drying levels		Gentle Reduces drying intensity (recommended for delicate items)	Rapid Shortens drying duration (recommended for small items)	Buzzer Signals/Sounds end of drying cycle at Intervals	Anti-Crease Prevents laundry from creasing	Start Delay Delays the drying cycle start
Cotton	85'	70'	3.0	Cotton Max 6 kg	Cupboard Dry +		max 3.5 kg			
	150'	120'	6.0		Cupboard Dry *		max 3.5 kg			
	60'	50'	3.0		Iron dry *		max 3.5 kg			
Synthetics	30'	25'	1.0	Synthetics Max 2.5 kg	Cupboard Dry +		-			
	55'	45'	2.5		Cupboard Dry *		-			
	25'	20'	1.0		Iron dry		-			
	45'	35'	2.5							
	20'	15'	1.0							
	35'	25'	2.5							
Shirts	30'	20'	1.5	1.5 kg	Specially indicated for drying of 5 shirts.	-	-			-
Airing	-	-	-	Airing 	Laundry is aired and refreshed for 30 minutes without heating.	-	-			
Time	-	-	-	20' 40' 60'	Completes drying or dries single items (suitable for all fabrics).	-	-	20' 40' 60'	20' 40' 60'	20' 40' 60'

Start Pause 	Starts the drying cycle. The drying indicator lamp is blinking during the selection phase. Press to confirm the final selection.
Start Delay 	Delays the drying cycle start from 1 up to 9 hours. To select the start delay turn the programme selector knob to the desired programme, select the desired options and press the start delay button. With each touch of the start delay button, drying cycle start is delayed by one hour. Press the Start/Pause button to confirm your final selection. Start delay indicator blinks and the count-down is running by reducing the time in one hour steps. The count-down is indicated by the blinking of the start delay indicator located in the button. During count-down the drum will turn from time to time to redistribute the laundry and the pump may be heard working for a short time. To cancel or to change the previously set time turn programme selector knob to "0" or open the door.
Remaining time indication 	After cycle start a default drying time is indicated depending on the selected drying programme. After 15 seconds the time will be adjusted to the real expected remaining time, depending on size, type and humidity of the load.
Anti-Crease Protection 	Re-distributes laundry in the drum. When the Anti-Crease option is selected and laundry has not been taken out, an anti-crease cycle is activated for 12 hrs. During the count-down the drum will turn from time to time to redistribute the laundry.
Filter 	The indicator lamp lights up when the filter needs cleaning. Clean the filter at the end of every cycle.
Water Container 	Lights up when water container needs to be emptied. The drying cycle is automatically interrupted. Empty the water container. Press the Start/Pause button to restart the dryer and to continue the programme.
Overdry Protection 	The indicator lamp lights up when a humidity controlled program is selected, to indicate the working protection function. Function is not active in time controlled programs 20' 40' 60' and Airing.
PROGRAMME SEQUENCE INDICATORS	
Overdry Protection	Lit: Overdry protection is working
Drying	Lit: programme is running.
End	Lit: End of programme.
Anti-Crease	Lit: Anti-Crease is running.

* Test programmes according IEC 61121

5019 307 00214

PREPARING THE LAUNDRY

1. Check that all fastenings are closed and that pockets are empty.
2. Turn the articles inside out.
3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows:

A) By care symbols (on the collar or inside seam):



Suitable for tumble drying



Tumble drying with reduced drying intensity only



Do not tumble dry

B) By amount and thickness/weight

Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

C) By type of fabrics

Cotton/Linen: Towels, cotton jersey, bed and table linen made of cotton or linen.

Synthetics/Easy Care: Blouses, shirts, overalls, etc. made of polyester or polyamide, as well as cotton/synthetic mixes.

D) By drying level

- Sort into: iron dry, cupboard dry, etc.

Do not tumble dry: Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Important: only use specific indicated dryer-safe additives and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. **Only use specific indicated dryer-safe plastic items** and never dry rubber or articles contaminated with vegetable oil in the dryer.

SELECTING A PROGRAMME & OPTIONS

Programme and Options:

- To select a programme, turn the programme selector knob to the required position. The Start/Pause indicator lamp is blinking "◁▷", indicating that the cycle needs to be started.
- To select an option, press the corresponding button. The indicator light in the button lights up confirming that the selection has been made.
- Press the option button again to cancel the option.

STARTING & COMPLETING A PROGRAMME

1. Having selected the desired programme and options, press the Start/Pause button. If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals, preventing the laundry from creasing. This Anti-Crease cycle can be extended up to 12h when Anti-Crease option has been selected.
2. On completion of the programme, set the programme selector knob to position "0".

CHANGING A PROGRAMME

When changing the programme during the drying cycle, the dryer stops. The Start/Pause indicator lamp is blinking "◁▷".

To operate the new programme, press the Start/Pause button.

INTERRUPTING A PROGRAMME

To interrupt the dryer during operation

1. Set the programme selector knob to Airing "🌀".
2. Press the Start/Pause button. Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the programme stops automatically if you open the door.
3. To restart, after door opening, close the door and press the Start/Pause button again.

DAILY MAINTENANCE & CLEANING

Clean the lint filter at the end of every drying cycle:

1. Open the door.
2. Pull the filter upwards.
3. Open the filter.
4. Remove lint using a soft brush or your fingertips.
5. Close the filter.
6. Push the filter back into place.

Empty the water container at the end of every drying cycle.

1. Pull the handle to remove the water container.
2. Empty the water container.
3. Replace the water container when empty by pushing it **completely** back in place.

DRAINAGE SYSTEM

The 6 kg cotton programmes are made for matching a 6 kg washed load of cotton spun at more than 1000 rpm. With a 6 kg load spun at lower speed than 1000 rpm, we recommend to connect your dryer to an external drainage hose for direct water drainage to avoid water container emptying.

TROUBLESHOOTING GUIDE

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet?
- Is the lint filter dirty (filter indicator lamp on)?
- Is the heat exchanger dirty? (refer to the Instructions for use)
- Is the ambient temperature too high?

The dryer does not operate:

(after a power failure and/or interruption to the mains supply, always press the Start/Pause button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has the programme been selected?

- Has the Start/Pause button been pressed?

Lint filter or water container indicator lamp light on:

- Is the lint filter clean?
- Is the water container empty?
- Is the water container correctly positioned?
- Is the heat exchanger clean?

Water droplets underneath the dryer:

- Is the heat exchanger correctly positioned?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been positioned correctly?

All programme sequence indicators blinking:

- Service call necessary.

AFTER-SALES SERVICE

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

SERVICE 0000 000 00000

